

High Index Materials for 193 nm and 157 nm Immersion Lithography

John H. Burnett, Simon G. Kaplan, and Eric L. Shirley
Physics Laboratory, NIST, Gaithersburg, Maryland, USA

James Webb

Corning Tropel Corporation, Fairport, NY, USA

Support to NIST from Office of Microelectronics Programs at NIST
and International SEMATECH

Outline

- Why high index materials for immersion lithography?
 - Needed to gain benefit of high index fluids
 - Reduce lens size
- High index materials

I. Alkaline Earth Fluorides

- Intrinsic birefringence issue
- Mixed solid solutions


II. Alkaline Earth Oxides

High Index Materials

Point of immersion fluid is to enable higher angles into resist \Rightarrow incr. NA.
Requires higher angles into the fluid from lens.

\Rightarrow increasing size of lens to contain aberrations

If $n_{\text{fluid}} > n_{\text{lens}}$, ray bends towards normal in fluid \Rightarrow loose max. NA

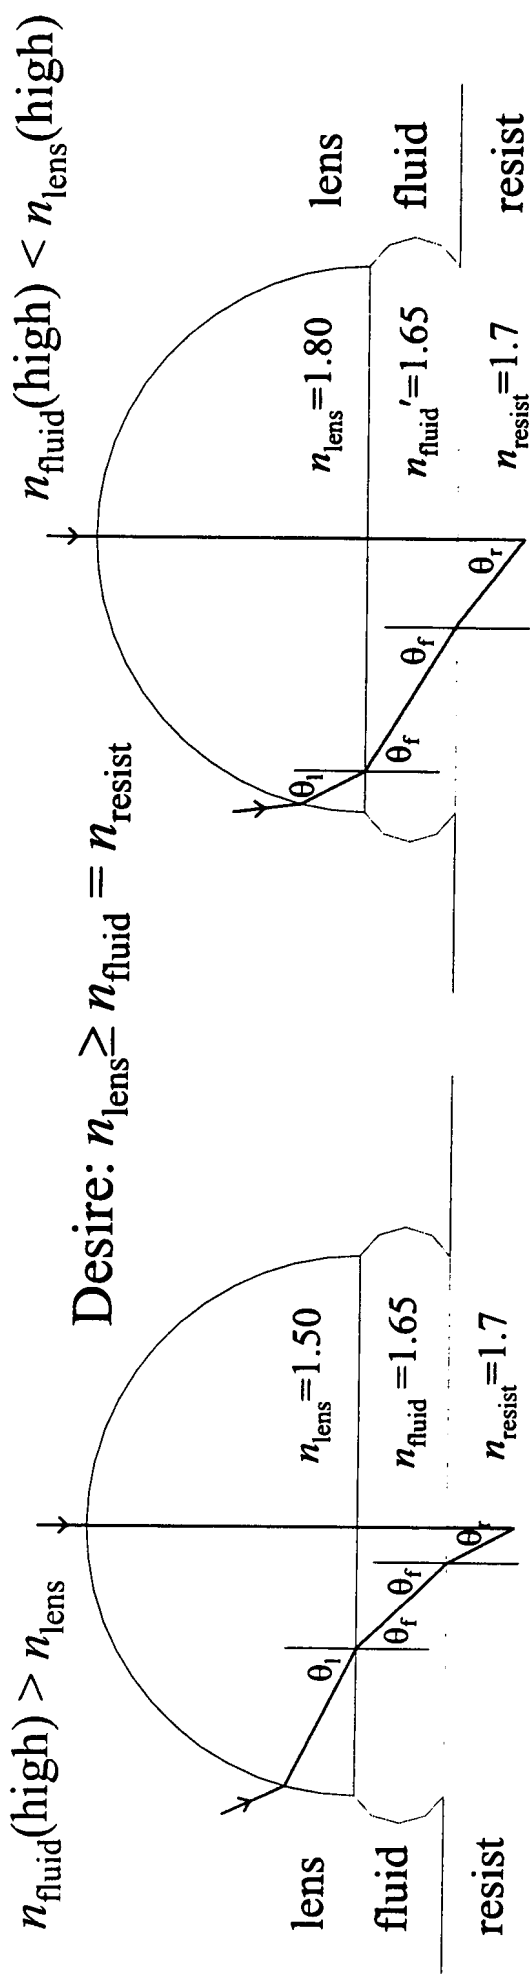


To gain full benefit of high n fluids need last element(s) with high n .
($n_{\text{lens}} > n_{\text{CaF}_2(193\text{nm})} = 1.50$)

Program to find and characterize candidate high index, isotropic (193nm transparent) materials:

Only need for last small lens element(s) \Rightarrow lower specs, easier to achieve


Increase System NA With Given Aperture Limit

To improve resolution with immersion fluid \Rightarrow larger angles \Rightarrow bigger optics

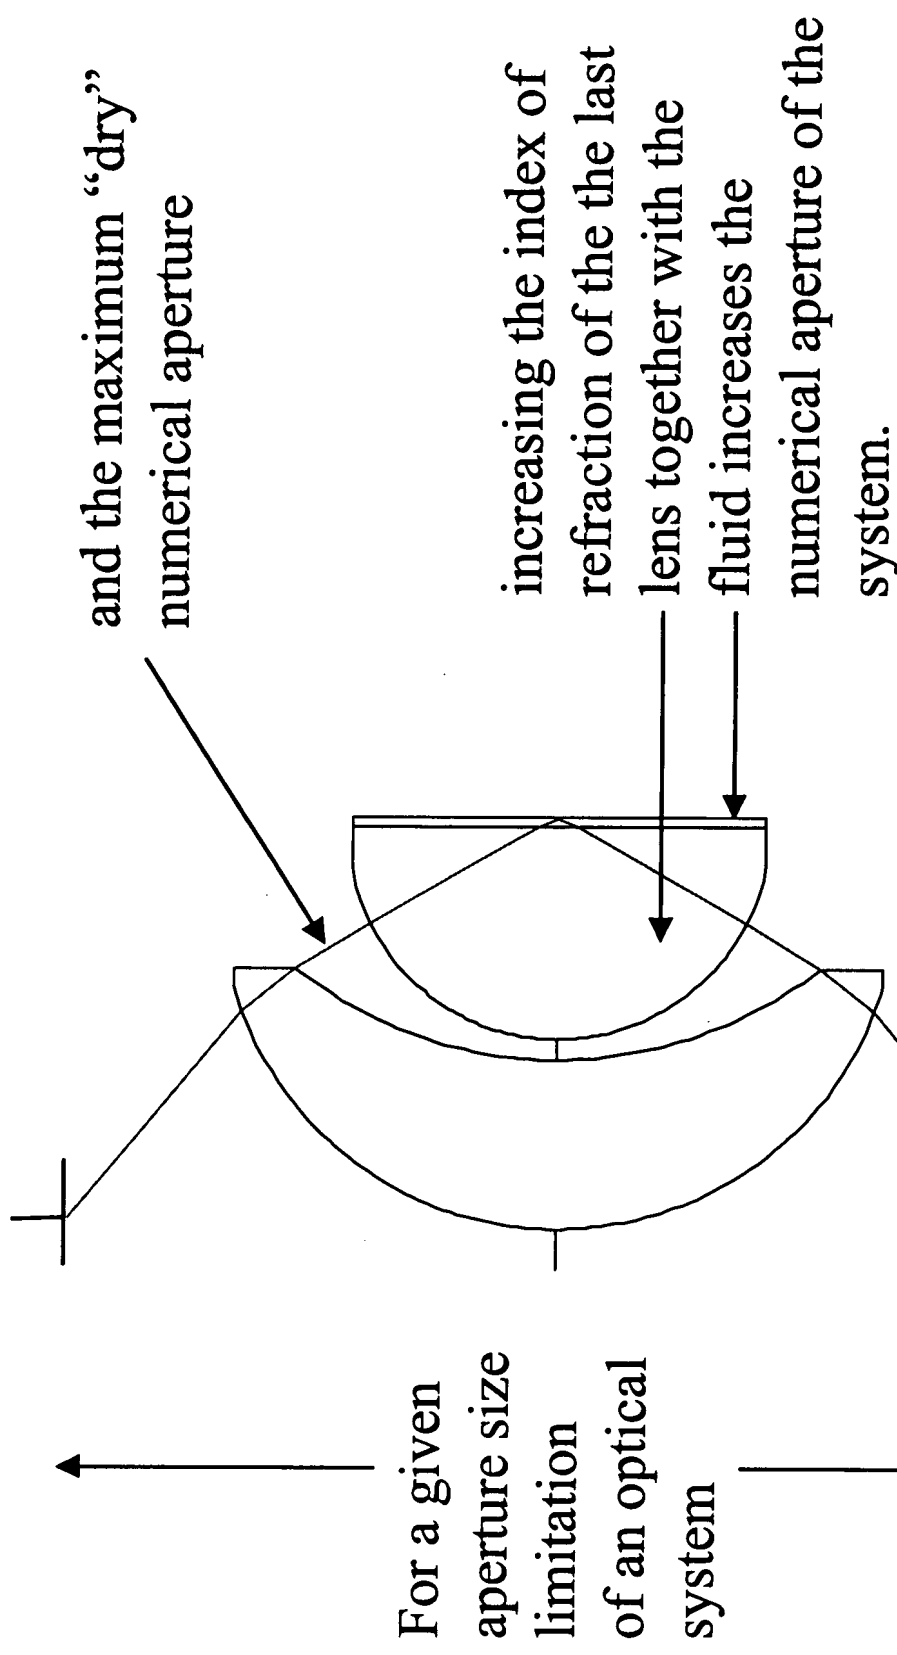

Reduce Maximum Aperture With Given NA

If fluids indices are limited but even higher index materials where $n_1/n_2 \gg 1.0$ can be found, then the maximum aperture is reduced

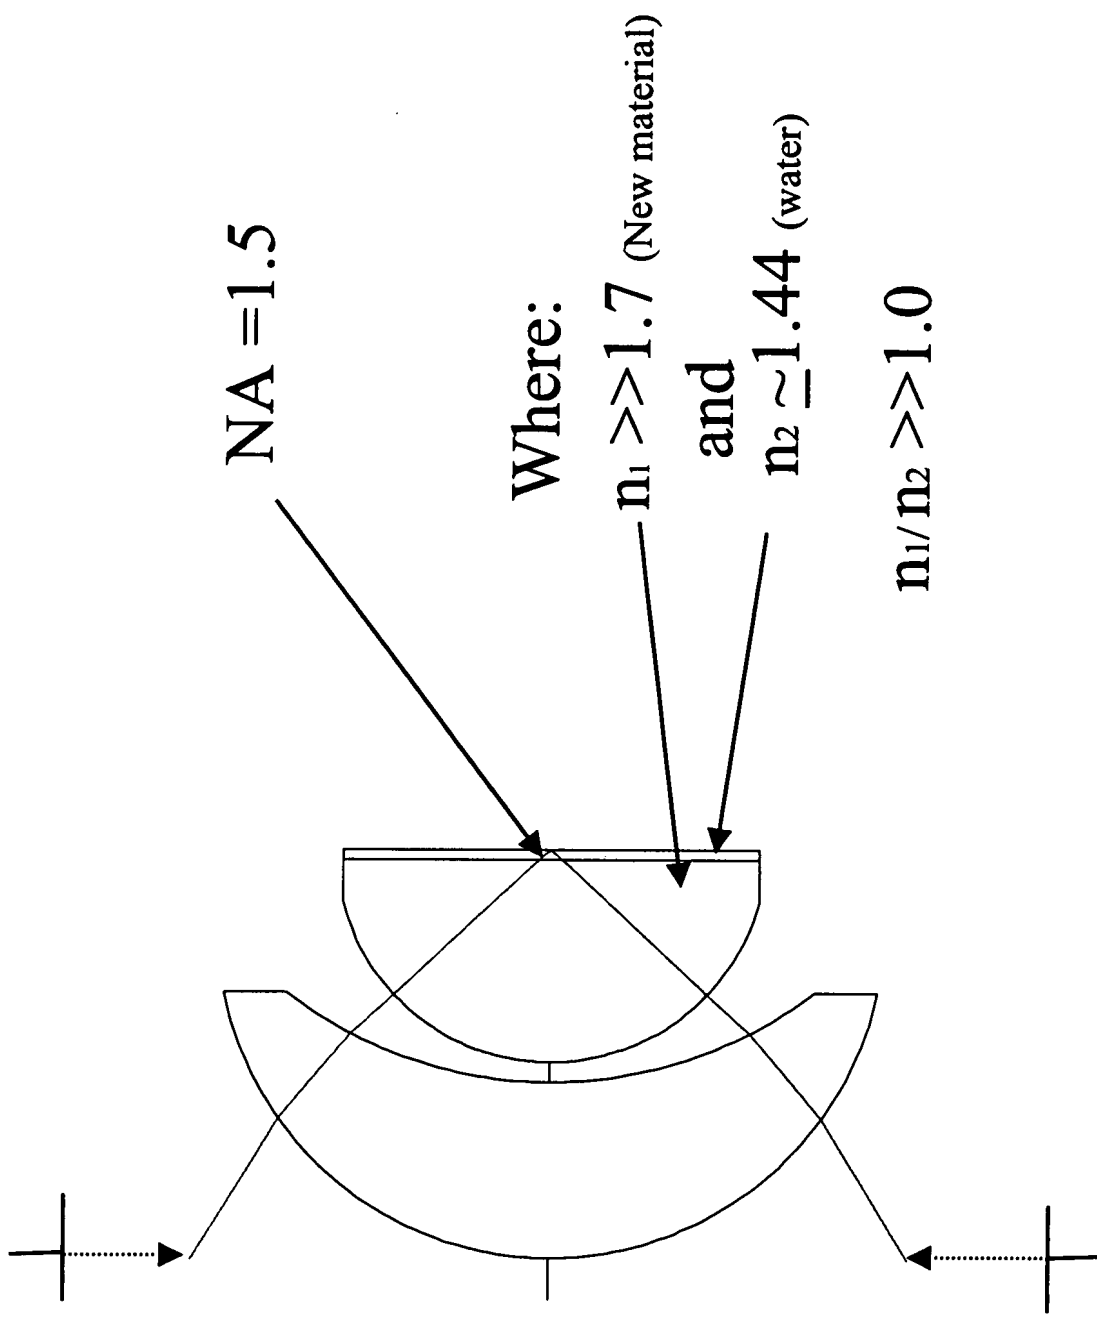

Reduce Polarization Effects

Ideal case:
If the fluid index and the material index are the same as the resist, index then refraction is minimized and polarization effects are reduced.

Assuming:
 $n_3 = 1.7$ (resist)

NA ~ 1.5


Where:

$n_1 = 1.7$ (New material)

and

$n_2 = 1.7$ (New Fluid)

$n_1/n_2 = 1.0$

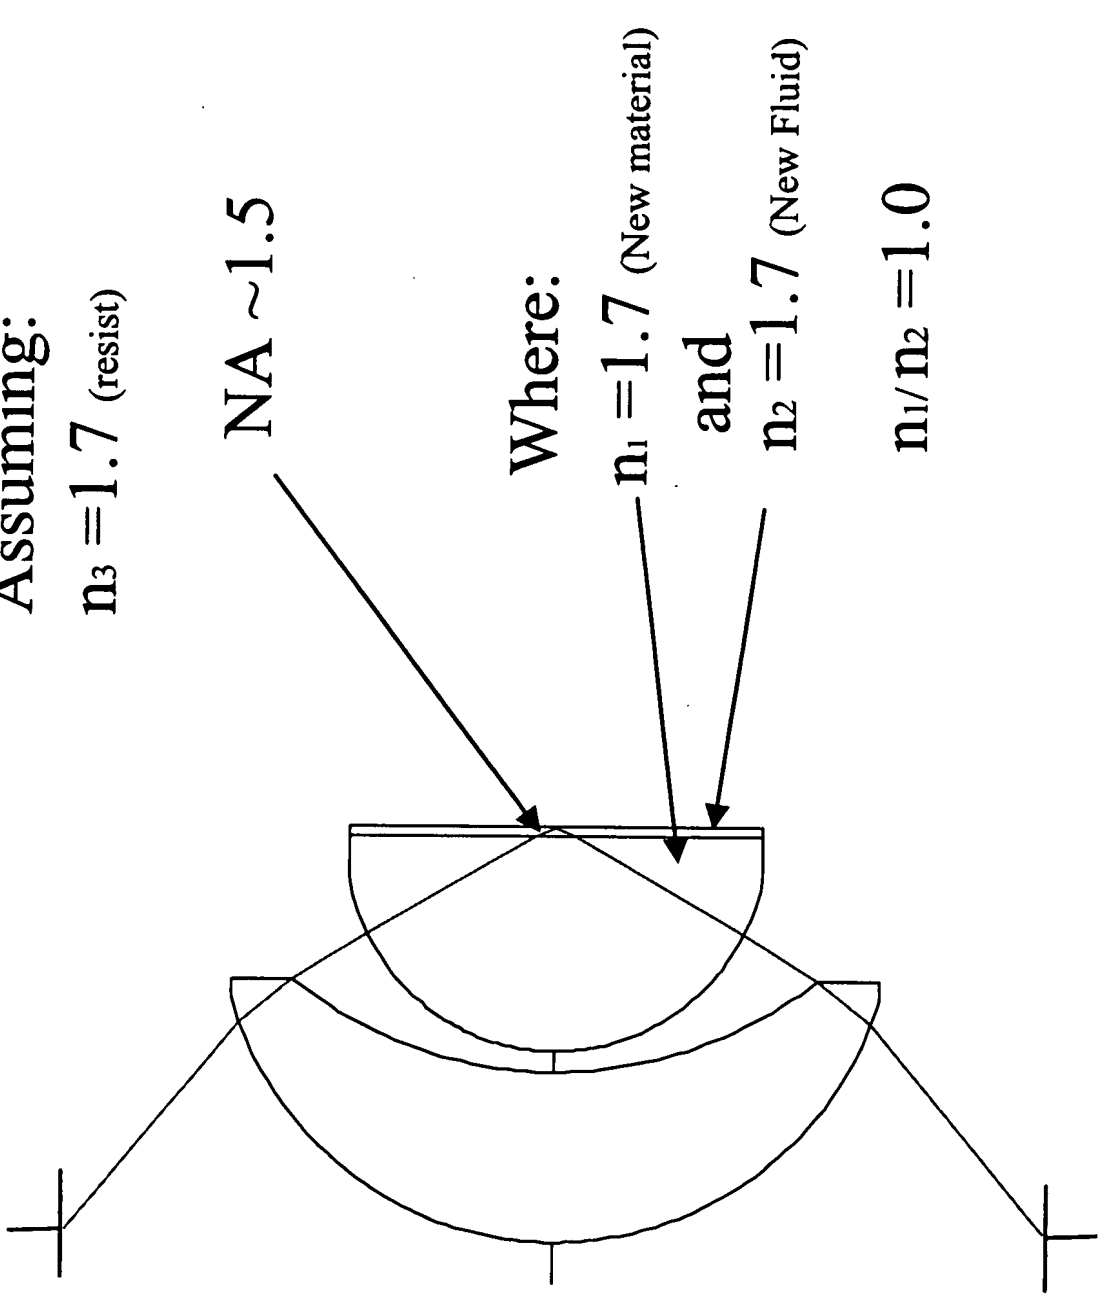

High Index Materials Program

- Program to find and characterize candidate high-index UV optical materials:
 - For 193nm and 157nm
- Since would only need for last small lens element(s) \Rightarrow specs. easier to achieve (lens small)
lower specs. (small fraction of total lenses)
- Material requirements:
 - transparent at 193 nm (157 nm)
 - grown as large, high-quality single crystals
 - isotropic optical properties \Rightarrow cubic symmetry
 - good extrinsic properties: index homogeneity, stress-induced birefringence, laser durability, ...
- Must be able to contain effects of intrinsic birefringence.

Alkaline Earth Fluorides


Group II Fluorides: CaF_2 , SrF_2 , BaF_2

- All band gap energies $> 8 \text{ eV}$
 \Rightarrow all transmit at 193nm and 157 nm
- All cubic crystals: $\text{Fm}\bar{3}\text{m}$
 (Ca on FCC lattice, F on SC Lattice)

At

Group	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Period	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
1	H	He																
2	Li	Be	B	C	N	O	F	Ne										
3	Na	Mg	Al	Si	P	S	Cl	Ar										
4	K	Ca	Sc	Ti	V	Cr	Mn	Fe	Co	Ni	Cu	Zn	Ga	Ge	As	Se	Br	Kr
5	Rb	Sr	Y	Zr	Nb	Mo	Tc	Ru	Rh	Pd	Ag	Cd	In	Sn	Sb	Te	I	Xe
6	Cs	Ba	La	Hf	Ta	W	Re	Os	Ir	Pt	Au	Hg	Tl	Pb	Bi	Po	At	Rn
7	Fr	Ra	Ac	Rf	Db	Sg	Bh	Hs	Mt	Ds	Rg							

↑ increasing band gap energies

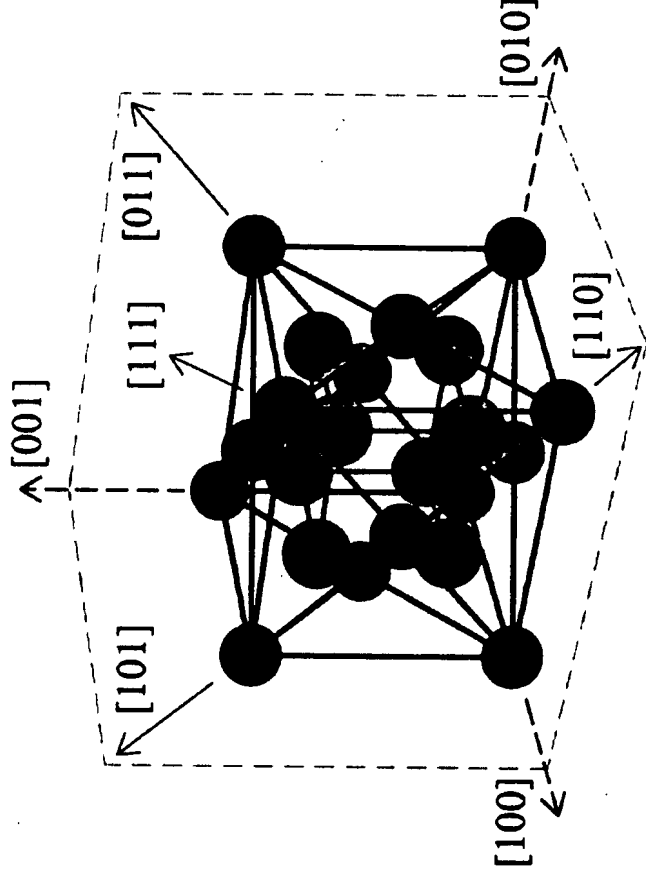

Material	Abs Edge	Index (193nm) (20 °C)	Index 157nm (20 °C)
CaF_2	123 nm	1.50	1.56
SrF_2	128 nm	1.51	1.58
BaF_2	134 nm	1.58	1.66

High n UV Optical Materials – BaF₂


Property	193 nm (20 °C)	157 nm (20 °C)
index	1.58	1.66
$dn/d\lambda$ (nm ⁻¹)	-0.002	-0.0044
dn/dT (°C)	1×10^{-6}	8.6×10^{-6}
q_{11} (10 ⁻¹² Pa ⁻¹)	-1.7	-2.4
q_{12} (10 ⁻¹² Pa ⁻¹)	2.0	2.0
$q_{11} - q_{12}$	-3.7	-4.4
q_{44} (10 ⁻¹² Pa ⁻¹)	1.1	1.30
IBR (nm/cm)	19	33

John Burnett, “Stress Birefringence, Intrinsic Birefringence, and Index Properties of 157 nm Refractive Materials”, SEMATECH Final Report (LITJ216) (2002).

- NIST previously characterized opt. prop. – color corrector 157 nm.
- Extensive experience, BaF₂ brought to material specs. nearly good enough for large 157nm litho lenses (with minimal effort).
- Durable to 193 nm and 157 nm excimer radiation.
- Miscible: Ba_xSr_{1-x}F₂ (all x) and Ba_xCa_{1-x}F₂ near $x = 0,1$.
- Can possibly increase index (above 1.58 at 193 nm) by mixing.
- High intrinsic birefringence: 19 nm/cm (193nm), 33 nm/cm (157nm).

Eliminating Intrinsic Birefringence With Mixed Crystals


- Demonstrated CaF_2 , SrF_2 , BaF_2 have intrinsic birefringence and anisotropy.
- Effect governed by single parameter.

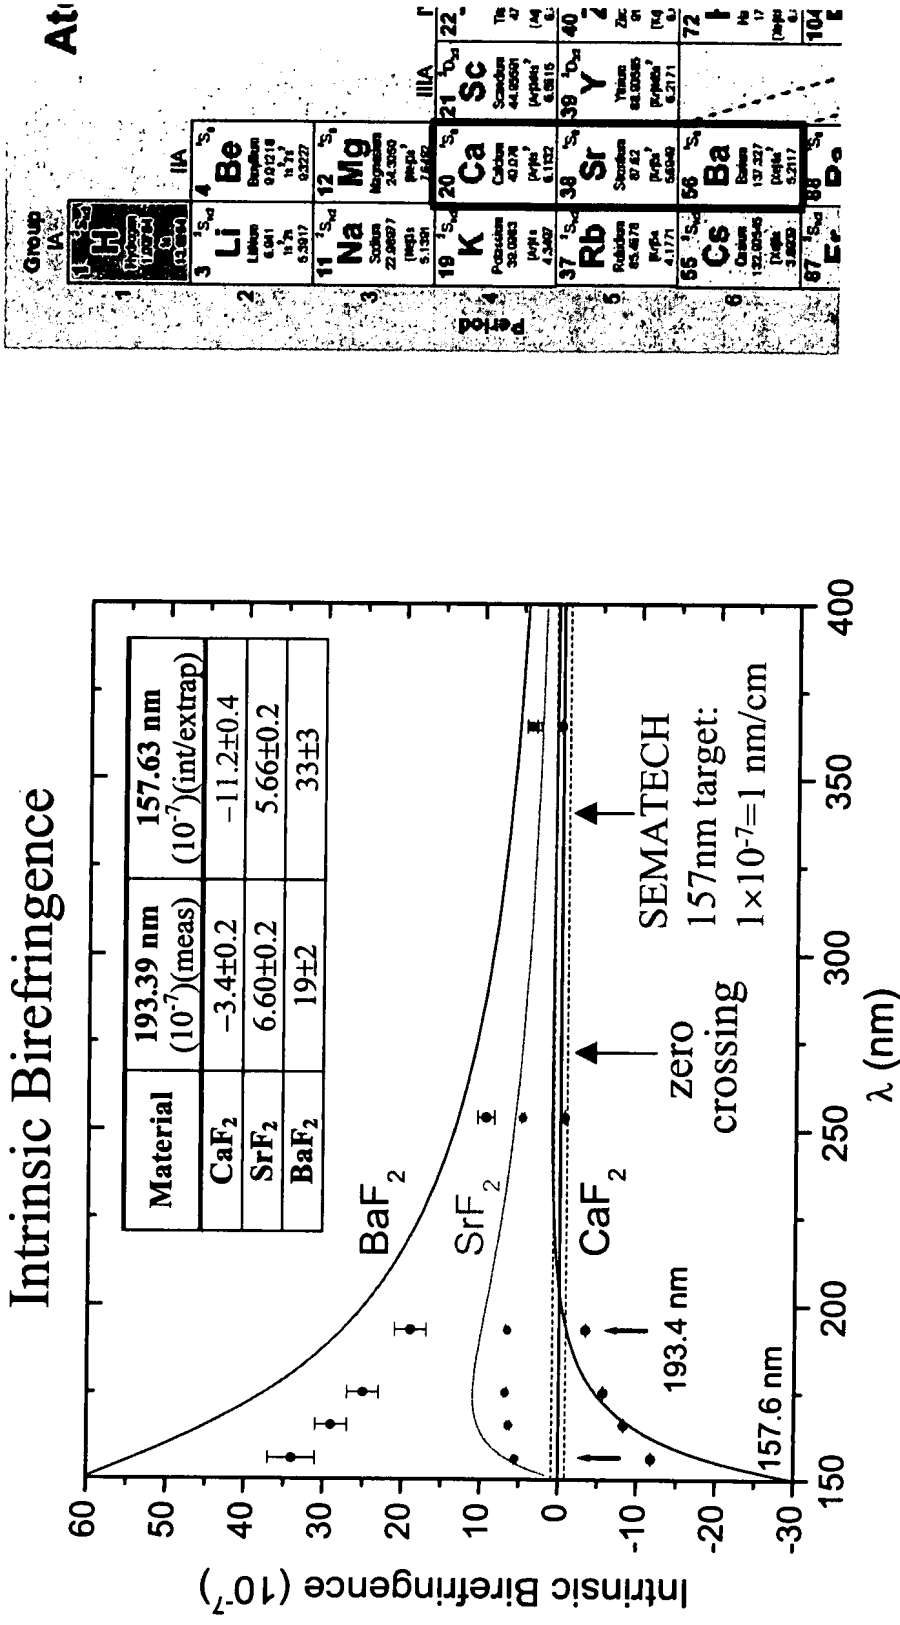

- SrF_2 and BaF_2 have IBR of opposite sign compared to CaF_2 .
- Ca/Sr , and Ba/Sr miscible for all x , Ca/Ba miscible for some x .
 \Rightarrow value of x for $\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$ or $\text{Ca}_x\text{Ba}_{1-x}\text{F}_2$ can be chose so that $\Delta n = 0$.
- Calc. $\text{Ca}_{0.3}\text{Sr}_{0.7}\text{F}_2$ nulls IBR at 157.6 nm; $\text{Ca}_{0.7}\text{Sr}_{0.3}\text{F}_2$ nulls IBR at 193.4 nm.

$\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$ Crystals


- $\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$ mixed crystals for $x=0.1-0.9$ grown by Corning, North Brookfield.
- Vacuum Stockbarger technique – no attempt to optimize process for x .¹
- Key results:
 - Single crystal ingots free of gross imperfections.
 - All have high transmission at 157 nm (varies monotonically with x).
 - Laser durability and induced α good.
 - Stress-induced birefringence relatively high ~ 5 nm/cm.
- Post growth anneal (2003).
- Oriented and prepared 25mm cube nominally $\text{Ca}_{0.3}\text{Sr}_{0.7}\text{F}_2$, with stress-induced birefringence ~ 0.6 nm/cm.

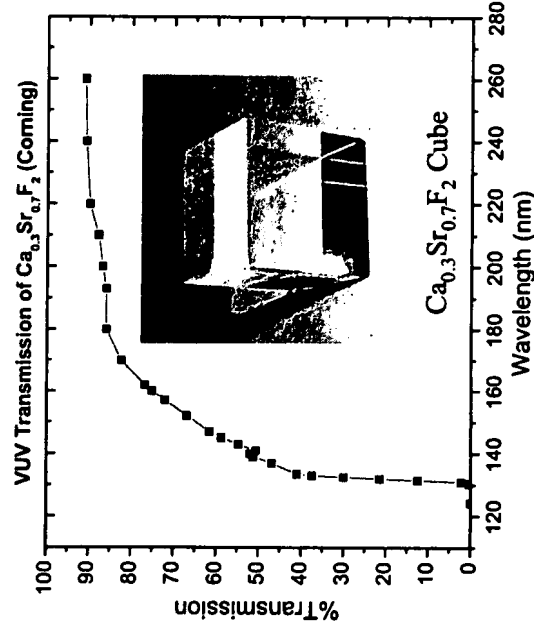

¹C. M. Smith and R. W. Sparrow, “Optical Properties of $\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$ Crystals”, 157 nm Symposium, Antwerp (2002).

Eliminating Intrinsic Birefringence In $\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$


NIST Intrinsic Birefringence Measurements

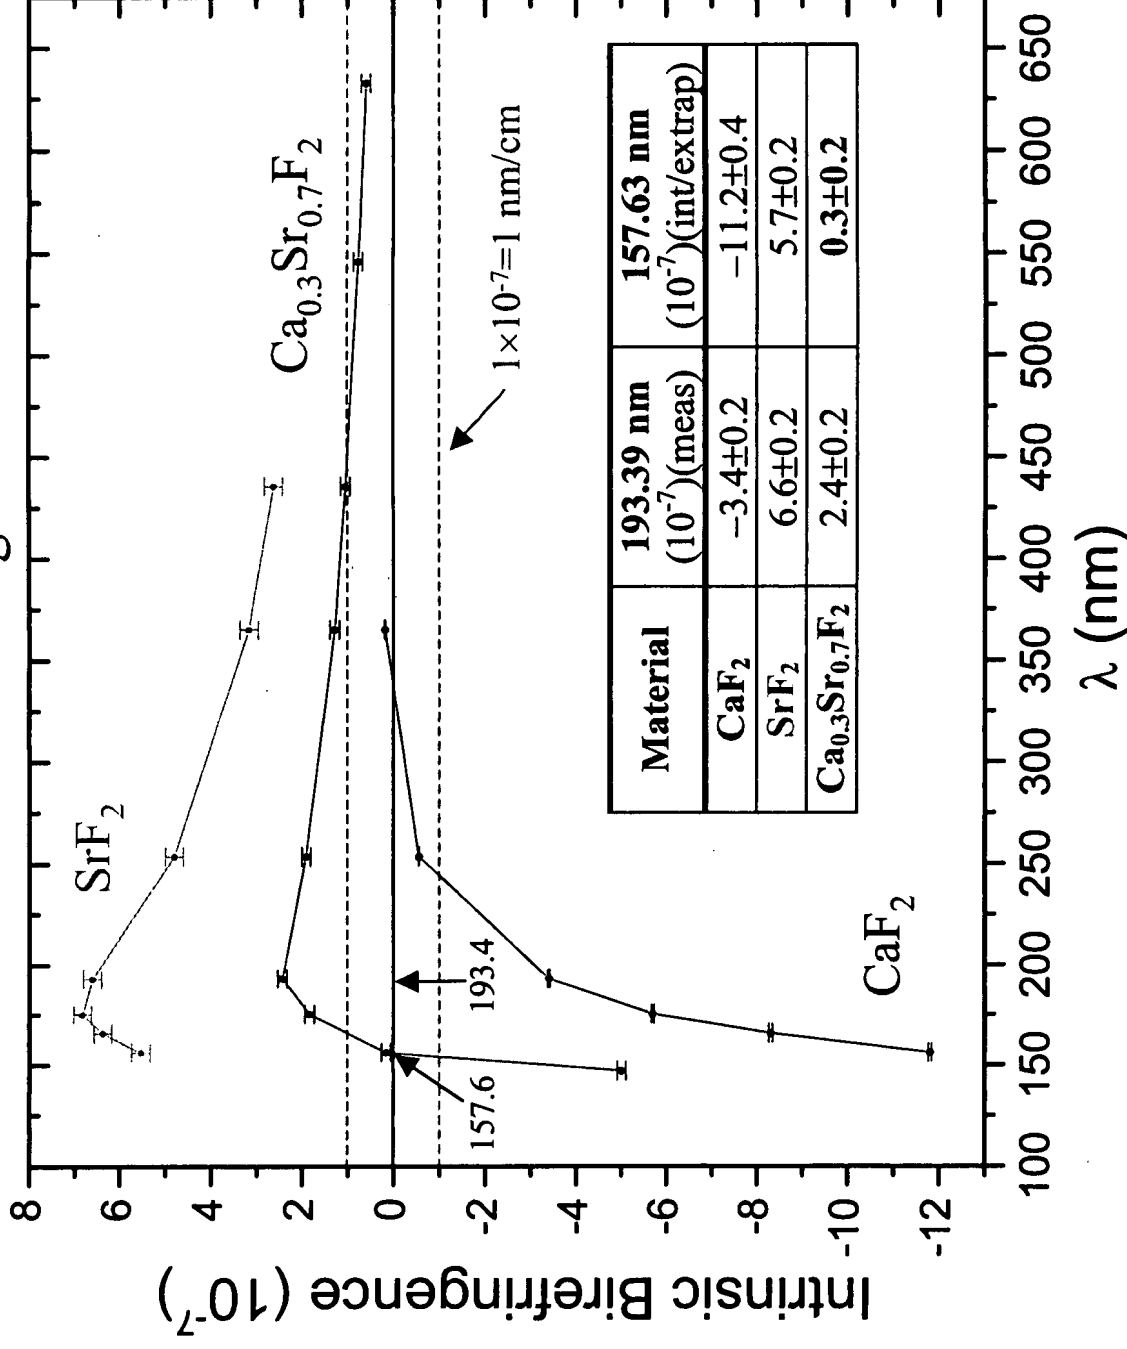

- $\text{Ca}_{0.3}\text{Sr}_{0.7}\text{F}_2$ eliminates intrinsic birefringence nearly completely at 157nm!
 - Expect that $\text{Ca}_{0.7}\text{Sr}_{0.3}\text{F}_2$ will eliminate intrinsic birefringence at 193nm.
- Note: $\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$ does not increase n substantially. But,
- 1) useful because incr. specs. 2) proof of principle for higher n materials

Alkaline Earth Oxides

Group II oxides: MgO, CaO, SrO, BaO
(Related oxides: e.g., MgAl₂O₄ - spinel)

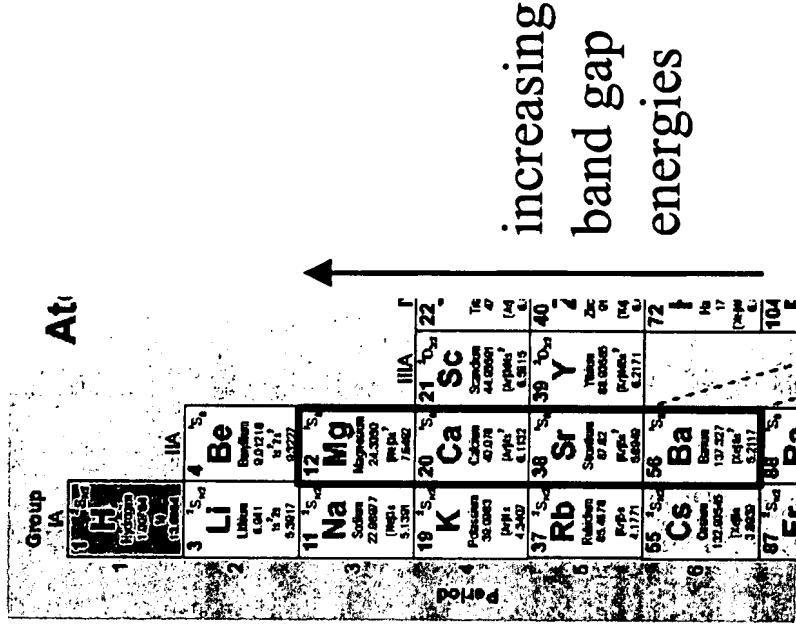


- MgO and MgAl₂O₄ high trans at 193nm.
- All cubic crystals: rocksalt structure.
(spinel – FCC)
- MgO and CaO miscible ~10%.
- MgO best known
 - high T_c superconductor substrate.
- Insoluble in water.
- High physical strength and stability.
- Cleaves (111) and (100) directions.
- High melting point 2852 °C.


Material	Abs Edge	Index (193nm) (20 °C)
MgO	165 nm	2.0
CaO	> 200 nm	2.7
SrO	> 200 nm	
BaO	> 200 nm	
MgAl ₂ O ₄	160 nm	1.8

Alkaline Earth Oxides – Calculated Dispersions

- First principles calculations (preliminary): Eric Shirley, NIST (7/13/04).
- CaO mixes with MgO to increase index above 2.0.

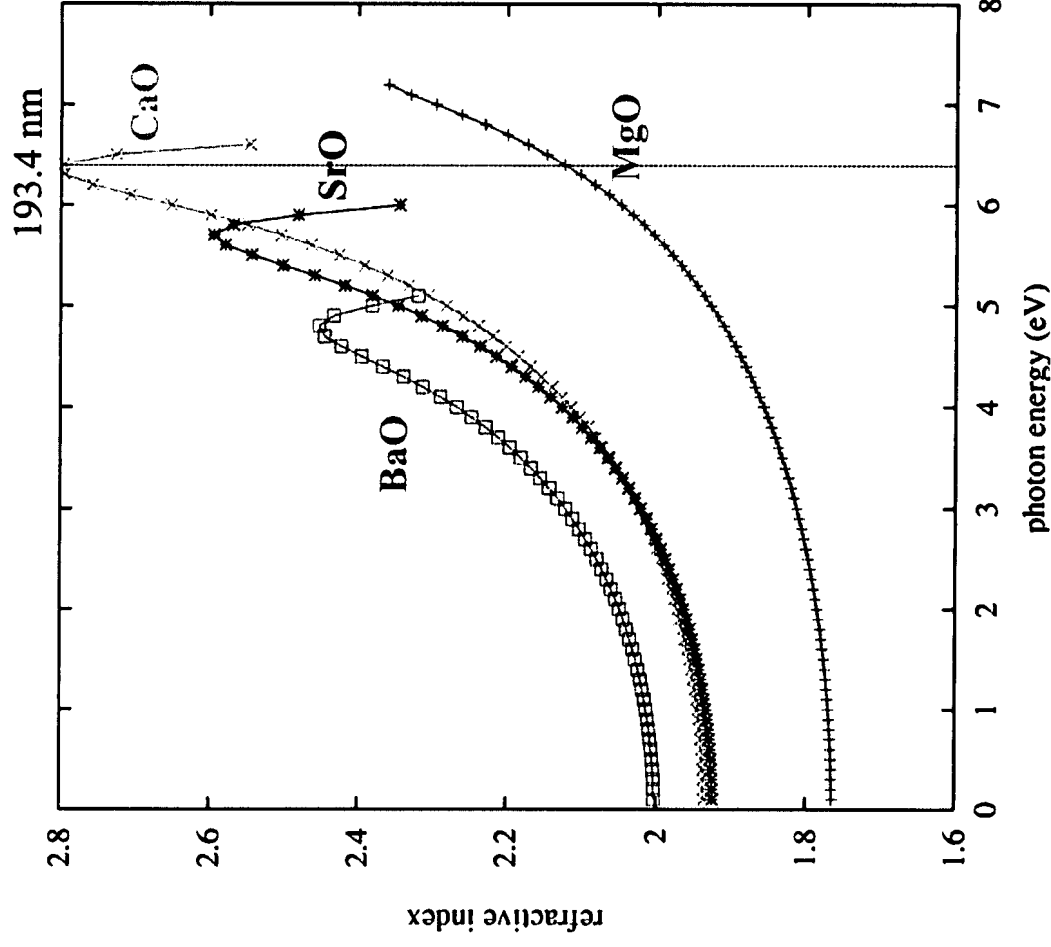


Alkaline Earth Oxides – Calculated IBR

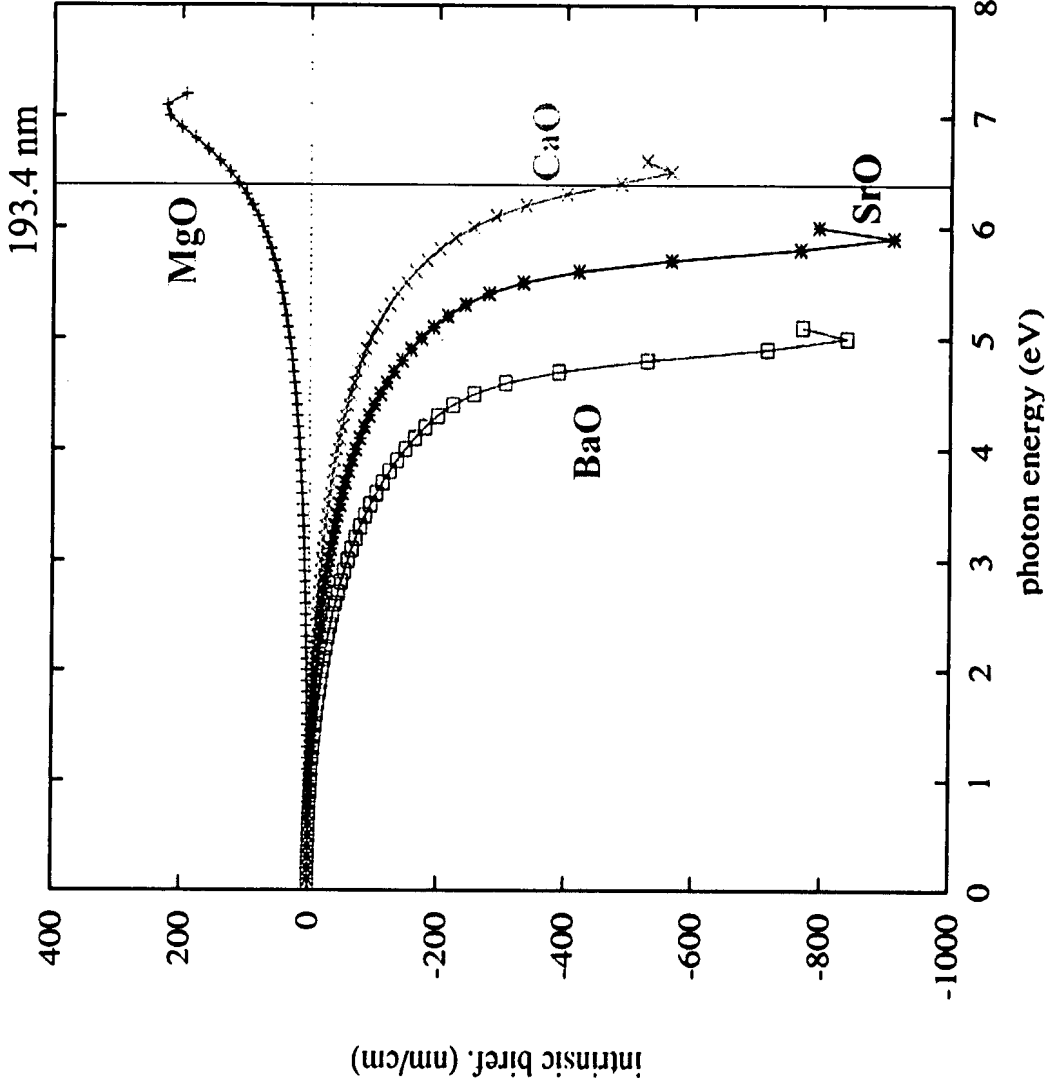

- MgO has intrinsic birefringence opposite in sign to that of others.
- As with $\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$, expect can mix in small amount of CaO into MgO to get $\text{Mg}_x\text{Ca}_{1-x}\text{O}$ with no intrinsic birefringence!

Simulation of IBR in MgO/CaO Mixture

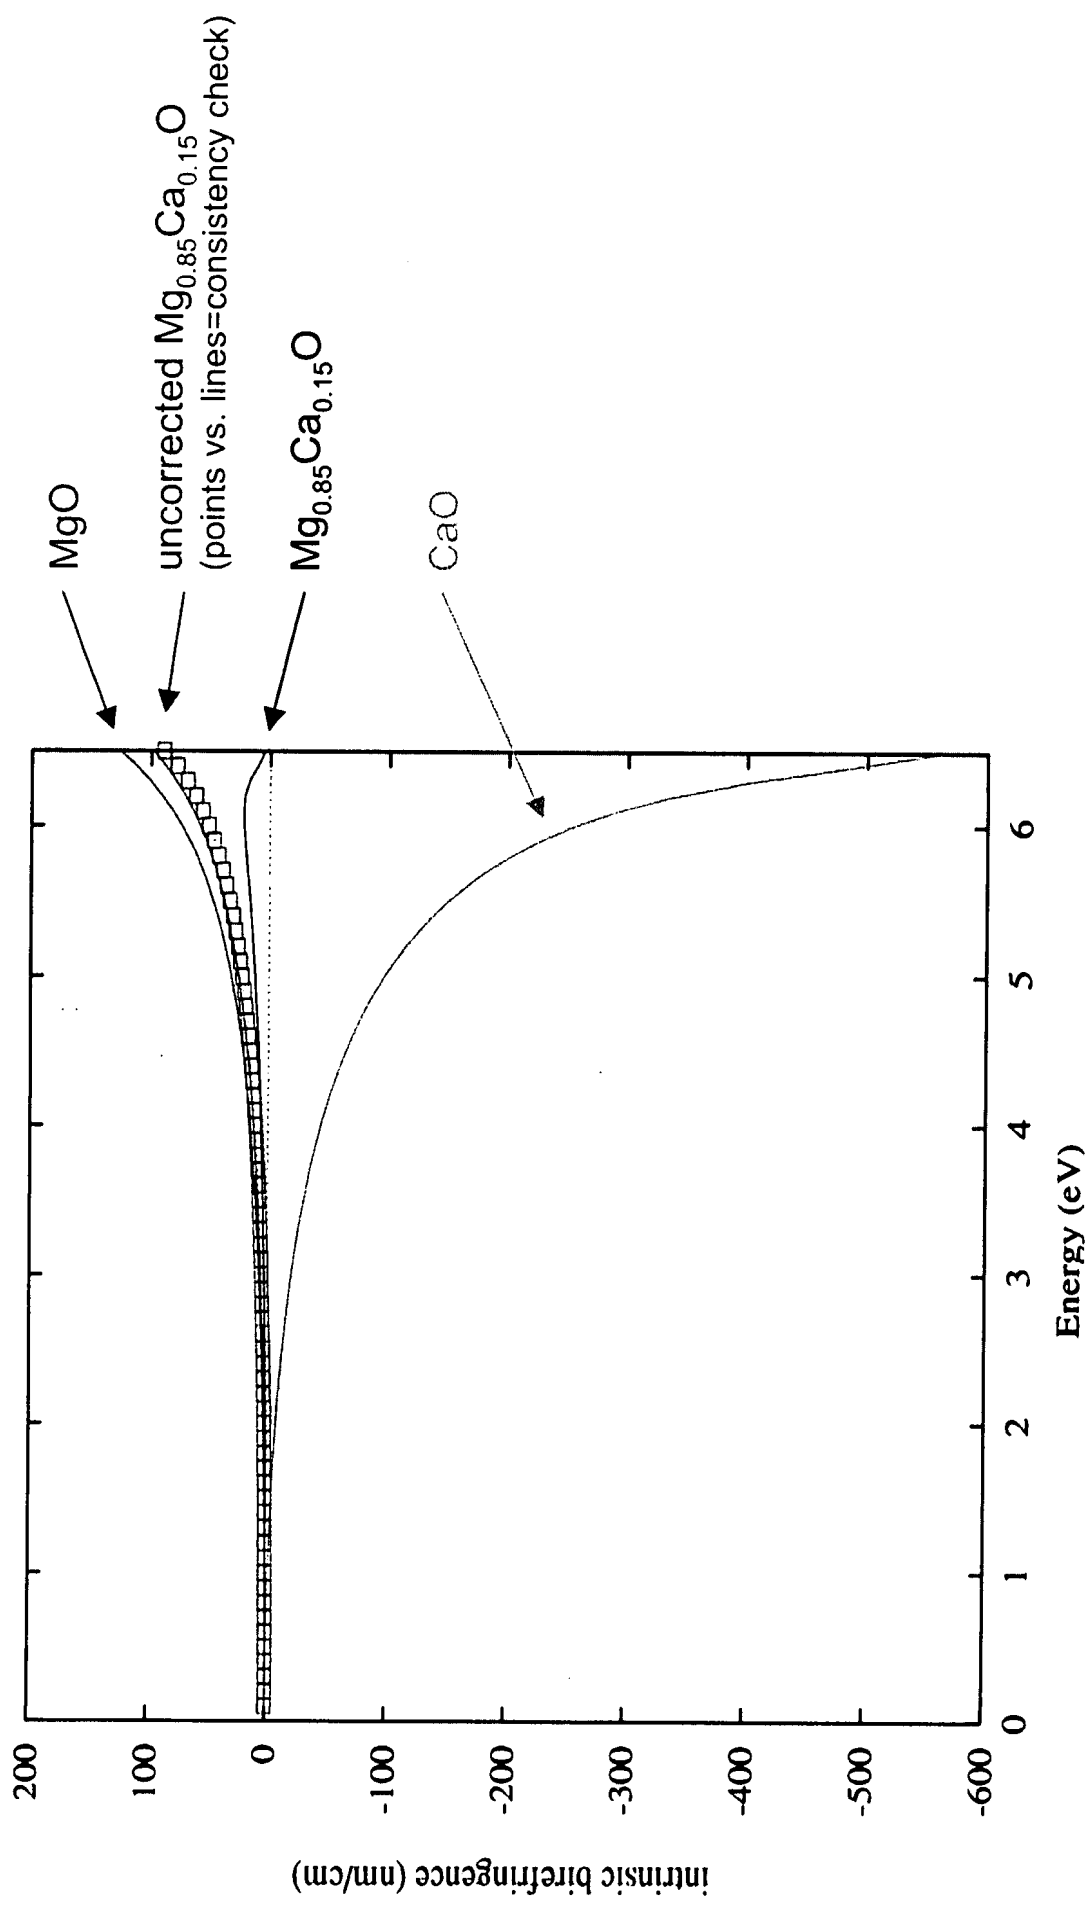

- Calculations of intrinsic birefringence in $\text{Mg}_{0.85}\text{Ca}_{0.15}\text{O}$ (preliminary).
 - Indicates no intrinsic birefringence at 193.4 nm.

Conclusions

- High index materials needed for last optical element of 193 nm (157) immersion systems to gain full benefits of high index fluids.
 - enables higher NA for given aperture if you increase indices of fluid and lens material together.
 - enables smaller lens designs for a given NA.
- Some gain using BaF_2 as last element material.
- Demonstrated that mixed crystals can eliminate intrinsic birefringence in Group II fluorides ($\text{Ca}_x\text{Sr}_{1-x}\text{F}_2$). Proof of principle for general case.
- More dramatic gains with MgO .
 - Mixed crystals with CaO ($\text{Mg}_x\text{Ca}_{1-x}\text{O}$) should allow elimination of intrinsic birefringence problem in this material.
- These approaches require some materials research to qualify/improve materials. But the smaller (thinner) the optic, the easier to implement. Can the industry find design solutions to utilize these high index materials with small path lengths?